

HP BLACK OPC DRUM

SR. NO.	DESCRIPTION
1	OPC DRUM FOR A X
2	OPC DRUM FOR VX
3	OPC DRUM FOR EX
4	OPC DRUM FOR 1010 B
5	OPC DRUM FOR 1010 OEM GLD
6	OPC DRUM FOR 1010 G3-11
7	OPC DRUM FOR 1010 OEM GRENSH HNP
8	OPC DRUM FOR 1200 B & G
9	OPC DRUM FOR 1320 B & G
10	OPC DRUM FOR 2055
11	OPC DRUM FOR 1005 HNP
12	OPC DRUM FOR 1005 OEM
13	OPC DRUM FOR 2100
14	OPC DRUM FOR 2300
15	OPC DRUM FOR 2400
16	OPC DRUM FOR 3015
17	OPC DRUM FOR 4000
18	OPC DRUM FOR 1010 G3-8
19	OPC DRUM FOR 4200/ 4300
20	OPC DRUM FOR 4015/4515
21	OPC DRUM FOR 5000
22	OPC DRUM FOR 8100
23	OPC DRUM FOR 9000 B
24	OPC DRUM FOR 9000 G
25	OPC DRUM FOR 3900
26	OPC DRUM FOR 1005 G1-3
27	OPC DRUM FOR 1010 G3-9
28	OPC DRUM FOR 1010 G1-8
29	OPC DRUM FOR 1400
COLOUR HP	
24	OPC DRUM FOR 1518/2025
25	OPC DRUM FOR 2600
26	OPC DRUM FOR 3800
27	OPC DRUM FOR 4600
28	OPC DRUM FOR 4700
29	OPC DRUM FOR 3500
30	OPC DRUM FOR 5500
31	OPC DRUM FOR 4025
32	OPC DRUM FOR 3525
33	OPC DRUM FOR 6015
34	OPC DRUM FOR 2500
35	OPC DRUM FOR 5225 LBP 9600
36	OPC DRUM FOR 1025
SAMSUNG	
37	OPC DRUM FOR 1610
38	OPC DRUM FOR 1710
39	OPC DRUM FOR 1910
40	OPC DRUM FOR 3050
41	OPC DRUM FOR 3560
42	OPC DRUM FOR ML 5000
43	OPC DRUM FOR ML 6060
44	OPC DRUM FOR 1631/1666
45	OPC DRUM FOR 5112
46	OPC DRUM FOR ML6320
47	OPC DRUM FOR 2150

48	OPC DRUM FOR ML 2250
49	OPC DRUM FOR 3710
50	OPC DRUM FOR ML 2851
51	OPC DRUM FOR ML 200
52	OPC DRUM FOR T-640
BROTHER	
49	OPC DRUM FOR DR 2000
50	OPC DRUM FOR DR 3000
51	OPC DRUM FOR DR 3100
52	OPC DRUM FOR DR 4000
53	OPC DRUM FOR DR 6000
54	OPC DRUM FOR DR 2200
LEXMARK	
54	OPC DRUM FOR E250
55	OPC DRUM FOR E120
56	OPC DRUM FOR E232
PANASONIC	
56	OPC DRUM FOR FA86
57	OPC DRUM FOR FAD91E
58	OPC DRUM FOR 1520
59	XEROX OLF1200 PHASER 3100